



### 8.3.2 SPA details

The reference diagram for the sealed polyethylene approach (SPA) air barrier details is Figure 8.8. The corresponding wall details dealing with air barrier intersections and penetrations are shown in Figures SPA 1 to 10. In addition, because polyethylene is commonly used for air barrier construction and for providing the vapour barrier, several figures in Chapters 9, 10, 11 and 12 also show the SPA approach.

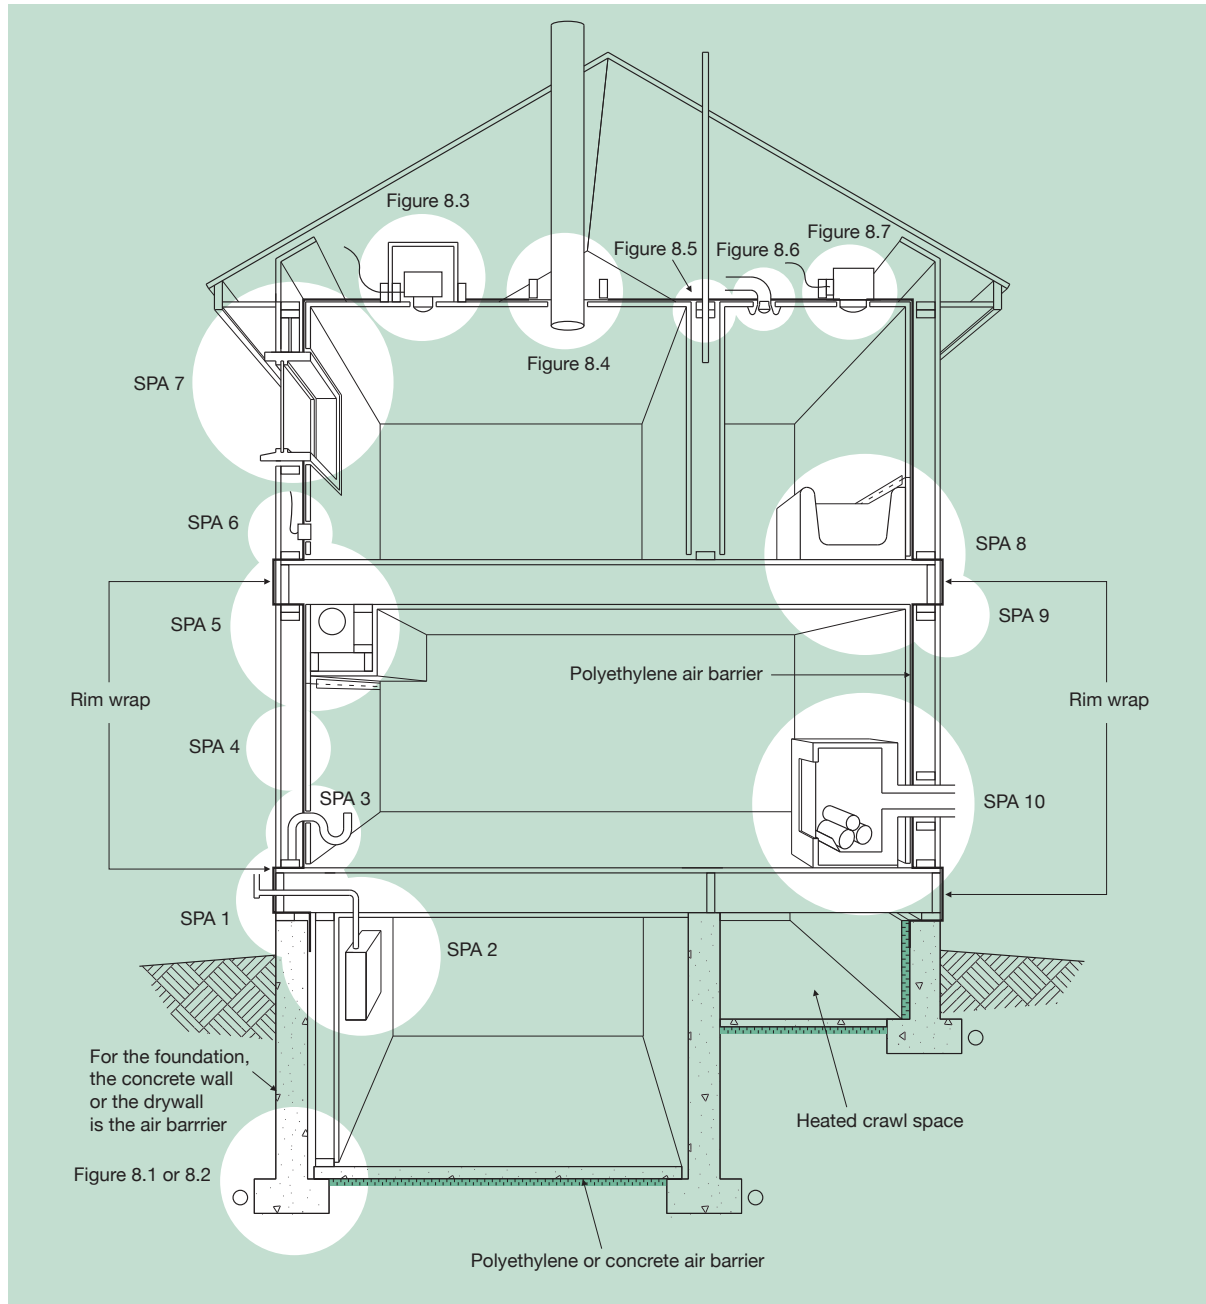


Figure 8.8 Key to sealed polyethylene approach (SPA) air barrier details